

Programming of the i-class ECU

- 1) switch OFF the power supply to the lift (turning the red key counterclockwise)
- 2) bring the lift to the fully closed position
(it is advisable to carry it electrically or manually with the emergency hand pump)



Setting "CLOSE POSITION"


- 1) make sure the lift is in the fully stowed position and the Power is OFF
- 2) press the two "Deploy" and "Store" buttons simultaneously.
- 3) keep the buttons pressed and power ON the lift.

keep the buttons pressed

while you are keeping the buttons pressed you must have the lights on permanently.

- 4) release the buttons. Wait 5 sec.
switch OFF the power
switch ON the power

Control if the lights are off

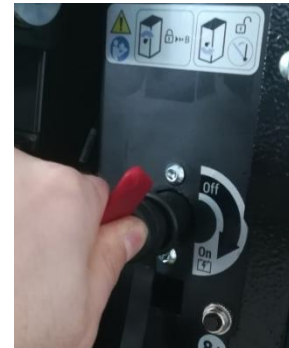

Setting "FLOR LEVEL POSITION"

1) OPEN the lift



2) position the lift at the vehicle floor level.



SWITCH OFF the Power

3) press the two "UP" and "DOWN" buttons simultaneously.



Setting "FLOR LEVEL POSITION"

4) keep the buttons pressed and power ON the lift.

keep the buttons pressed

while you are keeping the buttons pressed you must have the lights on permanently.



5) release the buttons. Wait until the lights **Blink**

while you wait do not press any buttons

switch OFF the power

switch ON the power



both values have been set in the ecu.

now you can run a check

Run a full cycle of the lift operation.